

STEERING WHEEL CONTROL & VIDEO INTERFACE FOR FIAT VEHICLES

43xft01



INSTALLATION GUIDE

The 43xft01 allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into the vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration.

VEHICLE APPLICATION

CITROEN	
JUMPER (250)	2014 - 2024
E-JUMPER (259)	2021 - 2024
RELAY (250)	2006- 2024
FIAT	
500 (ZAF 312)	2015 - 2022
500L (ZAF 199)	2012 - 2022
DOBLO (ZAF 263)	2015 - 2022
DUCATO (ZAF 250)	2014 - 2021
OPEL	
MOVANO CARGO C (Y)	2021 - 2024
MOVANO CARGO C (Y)	2024 - 2024
MOVANO ELECTRIK CARGO C (Y)	2021 - 2024
PEUGEOT	
BOXER (Y)	2014 - 2024
E-BOXER (Y)	2021 - 2024

CAN Bus Interface. 52-Pin Fiat Connector.

For vehicles with voice dial button

Note

Vehicles with directly wired Daiichi units using coloured cables are not compatible.

Vehicles fitted with Daiichi units using a black adapter wiring harness must have this harness removed before installation.

KEY FEATURES

- RETAIN STEERING WHEEL CONTROL FUNCTIONALITY
- REPLACE FACTORY RADIO
- MAINTAINS ACCESS TO SETTINGS THROUGH ON-SCREEN MENUS
- SUPPORTS PARKING CAMERA*
- OUTPUTS FOR SPEED PULSE, PARK BRAKE & REVERSE
- SUPPORTS ENGLISH, GERMAN, SPANISH, ITALIAN, FRENCH
- SOFTWARE UPDATEABLE

*AFTERMARKET CAMERA SOLD SEPARATELY. ADDITIONAL INTERFACE MAY BE REQUIRED FOR OEM CAMERA RETENTION.

PRIOR TO INSTALLATION

Installation requires a certain level of technical knowledge. Prior to installation, it is important to read the manual. Select a location for installation that is dry and free from heat sources. It is essential to use the correct tools during installation to prevent any damage to the vehicle or the product itself. Please note that we cannot be held liable for any issues arising from improper installation.

Before proceeding with installation, disconnect the negative battery terminal and ensure the key is removed from the ignition.

WIRING KEY

ISO CONNECTOR WIRING KEY	Purple Purple/Black Green Green/Black	Right Rear Speaker + Right Rear Speaker - Left Rear Speaker + Left Rear Speaker -	Grey Grey/Black White White/Black	Right Front Speaker + Right Front Speaker - Left Front Speaker + Left Front Speaker -	Yellow Black Red Orange	Permanent 12V Ground Ignition 12V Illumination
FLYING WIRE WIRING KEY OUTPUTS & RATINGS	Pink Green	Speed Pulse - 0 to 12V Square Wave @ 1Hz/Kph Park Brake	Purple/White Orange	Reverse Gear - 250mA Illumination - 250mA		
		Standby Current <3mA	Operating Voltage 6V to 16V		Operating Temperature -20C to 85C *rated at 25 degrees Centigrade	

DIPSWITCH CONFIGURATION

MANUFACTURER	SYSTEM	DIPSWITCH CONFIGURATION				CONNECTION
		1	2	3	4	
RESERVED	NA	OFF	OFF	OFF	OFF	SOFTWARE UPDATE MODE
ALPINE	IR DATA	OFF	ON	OFF	OFF	MALE 3.5MM JACK
ANALOG SINGLE EXTEND	Analog	ON	ON	ON	ON	BROWN SWC IR
ANALOG SINGLE WIRE	Analog	ON	ON	ON	OFF	BROWN SWC IR
CLARION	IR DATA	ON	OFF	OFF	ON	MALE 3.5MM JACK
CUSTOM	IR DATA	ON	OFF	ON	OFF	HEAD UNIT DEPENDANT
GRUNDIG	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
JVC	IR DATA	OFF	OFF	ON	OFF	BROWN SWC IR
KENWOOD 1	IR DATA	ON	OFF	OFF	OFF	BROWN SWC IR
KENWOOD 2	IR DATA	ON	ON	OFF	OFF	BROWN SWC IR
KEY 1 / KEY 2	Analog	OFF	ON	ON	OFF	KEY1 / KEY 2 WIRES
KEY 1 / KEY 2 EXTEND	Analog	OFF	ON	ON	ON	KEY1 / KEY 2 WIRES
PHILIPS	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
PIONEER 1	Analog	OFF	OFF	OFF	ON	MALE 3.5MM JACK
PIONEER 2	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
SONY	Analog	ON	OFF	ON	ON	MALE 3.5MM JACK
ZENEC	IR DATA	ON	ON	OFF	ON	BROWN SWC IR

DIPSWITCH 5 to 8

Dipswitch 5 to 8 are reserved for vehicle specific configuration, see the below head unit selection settings. If the odometer is flashing, adjust the Dipswitch settings to select the correct configuration.



5-Inch Stereo
Dipswitch 5 & 6 ON (Down)



Citroen / LCD
Dipswitch 5 ON (Down)



Ducato 3rd Gen
Dipswitch 5 to 8 OFF (Up)



7-Inch
Dipswitch 6 ON (Down)

KEY1 and KEY2	KEY1 and KEY2 are specifically tailored for analog learning mode-style radios. Our SWC module is designed with a resistor chain that precisely matches the required resistance for seamless compatibility with this type of head unit.
KEY1 and KEY2 EXTEND	This mode extends every button press to 2 seconds during the learning process. However, with roll-over wheel-designed steering wheel buttons, holding for 2 seconds isn't feasible. Our KEY1 and KEY2 extend feature addresses this by automatically prolonging each press, simplifying head unit programming even in such scenarios. Extend mode is not intended for normal use, it is only used in the teaching process.
ANALOG SINGLE WIRE and ANALOG SINGLE WIRE EXTEND	This function operates similarly to KEY1 and KEY2 but transmits all unique values through the IR SWC single wire. This is crucial for compatibility with learning-style head units featuring only one learning input wire. To ensure compatibility, we've incorporated this feature into our steering wheel control interface, ensuring seamless operation across various head unit setups. The Analog Extend mode functions identically to its counterpart within the KEY1 and KEY2 system but transmits through a single wire.


CONNECTION GUIDE

BEFORE INSTALLATION

Prior to installing the interface, it is essential to remove and disconnect the factory stereo. For guidance on this process, please refer to the vehicle owner's manual/handbook or seek assistance from a professional.

SETTING THE DIPSWITCHES

This interface includes a set of dipswitches. Consult the dipswitch selection guide to select the appropriate configuration. To activate a dipswitch, press it downward into the 'ON' position. Refer to the diagram for an example of the 'KENWOODI' dipswitch configuration.

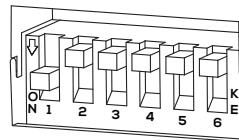

INSTALLATION

1. Take the interface, then connect the 16-PIN head unit connection lead and the 18-PIN steering wheel harness connectors to their respective ports.
2. Connect the head unit connection lead to the steering wheel remote input on the rear side of the aftermarket stereo. Connection methods vary based on the stereo brand, utilising either a 3.5mm jack connector SWC IR wire or wired inputs KEY1 and KEY2. *For specific connection guidance, refer to your aftermarket stereo's installation manual if not clearly labelled on the stereo harness.*
3. Connect the power/speaker ISO connector from the interface to the corresponding power/speaker ISO connection on the aftermarket stereo. *For aftermarket stereos lacking an ISO connector, refer to the "Wiring Key" on Page 2 for guidance on connecting wires. Certain interfaces may also include extra "flying" wires for additional functionalities such as parking brake trigger, reverse gear, and speed pulse. Further information on these wires is available in the "Flying Wire Wiring Key" section.*
4. Connect the vehicle-specific connectors from the interface harness to the corresponding connectors on the vehicle harness.
5. Connect the flying wires on the harness to the rear of the stereo (if applicable).
6. Connect the antenna adapter to the vehicle's existing connection at the rear of the aftermarket stereo.
7. When installing an aftermarket reverse camera, connect the yellow RCA from the harness to the yellow RCA of the aftermarket camera. (If supported by the interface and vehicle)
8. When installing a DAB antenna, ensure to connect the DAB aerial connector to the rear of the new stereo.
9. Ensure the reverse camera is enabled on the aftermarket radio and that the reverse trigger wire is connected to the reverse wire.
10. After connecting all wires (along with any additional accessories), it's crucial to thoroughly test the stereo and steering wheel controls before reassembling the dashboard. If steering wheel controls are unresponsive, inspect connections and check dipswitch settings. Repeat the connection process if necessary, following the outlined steps.

USB UPDATE LEAD - Connect the USB lead to the interface and route it to an accessible location for future software updates.

STEERING WHEEL CONTROL CONFIGURATION



A Volume Up
B Volume Down
C Track Up
D Track Down

E Source / Voice
F Mute
G Pick Up
H Hang Up

MENU NAVIGATION

Hold **C/D** to access the vehicle menu

Short press **C** and **D** to **navigate** through the menu

Short press **A** or **B** (UP and DOWN) to **Increase or Decrease menu value**

The provided diagram, while meticulously researched, serves as an example only. Actual steering wheel control configurations may vary dependant on each vehicle.

MENU SETTINGS

Interface Settings	
Language	▲ English ▼
Interface Options	
Picture Settings	
Version	

Interface Settings Select language. Supports English, German, Spanish, Italian, French

Time and Date	
Time Format:	▲ 24 Hour ▼
Time:	01.01.2025 12:00


Time & Date Adjust the time and date settings including time format.

Picture Settings	
Size / Position	▲ 0 ▼
Contrast	◀ 50 ▶
Brightness	◀ 50 ▶

Picture Settings Select picture setting options including position, brightness and contrast.

CONNECTION DIAGRAM

HEAD UNIT CONNECTION LEAD

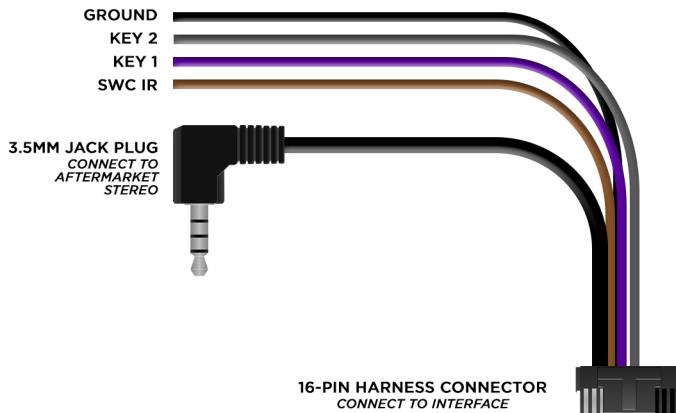

SWC INTERFACE



SWC VEHICLE HARNESS

