


SKODA OCTAVIA 2014->

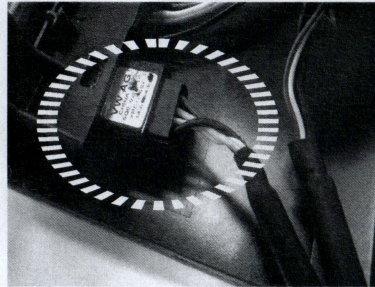

Plug in the connector of the Jack interface.
Connect the AUX and USB plugs to the head unit and check the proper functioning of the system.
Remount the panel on the dashboard.


USB and Jack 3,5mm replacement PCB




03/2015 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.


Installation Manual

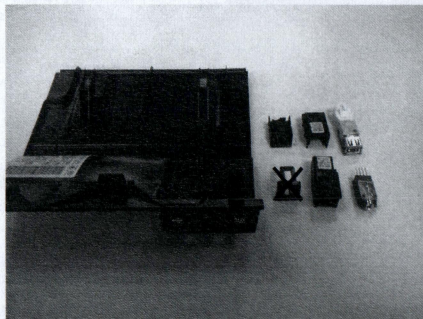


Take out the plastic panel of the Jack/USB interface and remove the two interfaces. Open the plastic covers as shown in the picture and take out the original PCBs. This removed plastic part marked with an X will no longer be required.

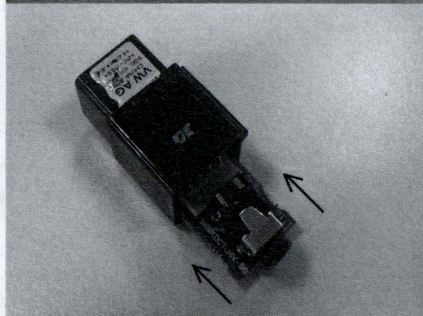


Take the new PCB with Jack plug and slide it into the original housing.

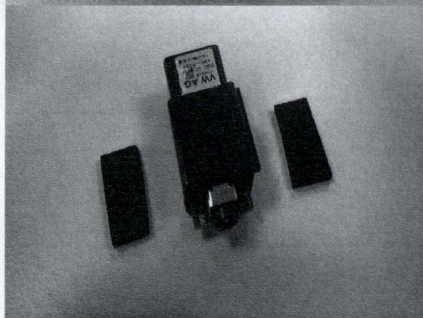

Take the supplied adhesive sponge and cut it in two pieces as shown in the picture.

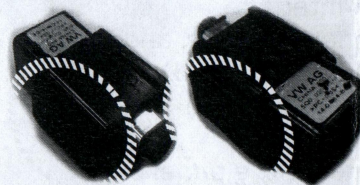

Apply the two pieces on the two sides of the interface in order to avoid any vibration of the plastic.

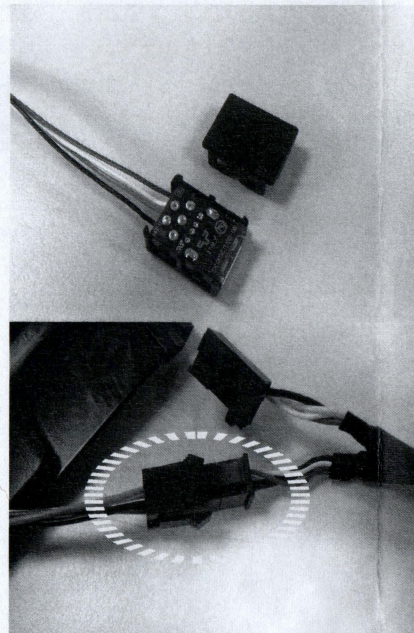

Take the PCB with USB plug and place it into the original housing .

Take supplied the harness and plug the connector of the USB interface.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.